



INSTALLATION INSTRUCTIONS

Accessory

CARRIER BRACKET
P/N 08Z51-MEW-100

Application

NT700V

Publications No.


MII 12946

Issue Date

August 2009


Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

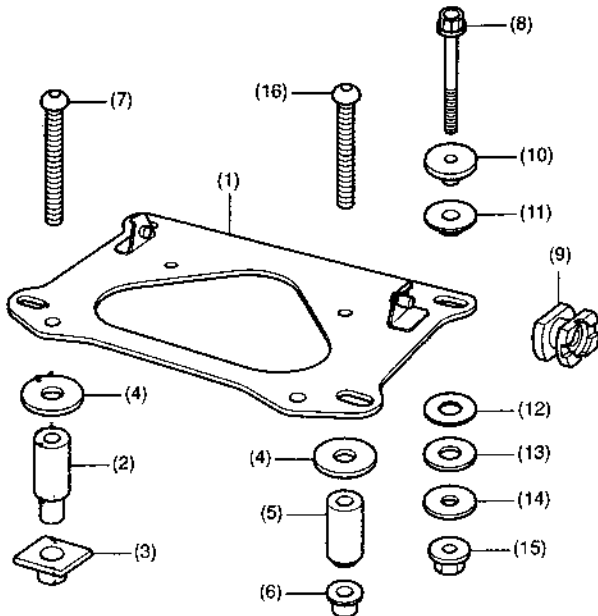

No.	Description	Qty
(1)	Carrier bracket	1
(2)	Stepped collar (long)	2
(3)	Square nut	2
(4)	Washer (large)	4
(5)	Stepped collar (short)	2
(6)	Flange collar	2
(7)	8 mm socket bolt (long)	2
(8)	6 mm flange socket bolt	4
(9)	Rubber	2
(10)	Flange collar (Black)	4
(11)	Flange collar (White)	4
(12)	Nylon washer	4
(13)	Rubber washer	4
(14)	Washer (small)	4
(15)	6 mm flange nut	4
(16)	8 mm socket bolt (short)	2

REAR CARRIER BASE

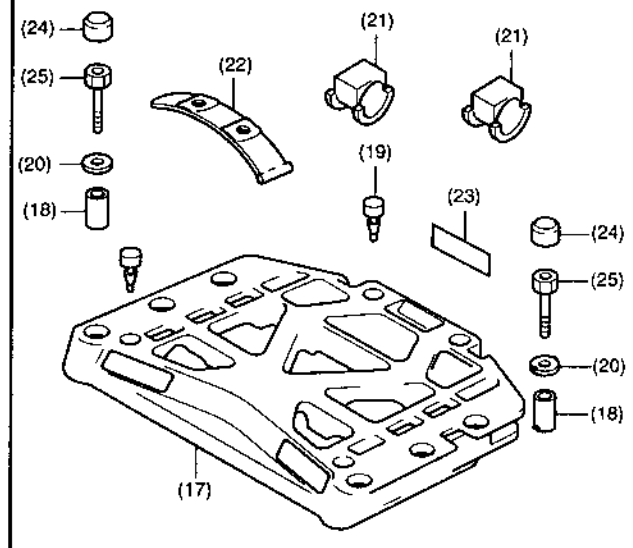

No.	Description	Qty
(17)	Rear carrier base	1
(18)	Collar	6
(19)	Rubber	4
(20)	6 mm washer	6
(21)	Lock rubber (not used)	2
(22)	Lock band (not used)	1
(23)	Rear carrier mark	1
(24)	Base carrier cap	6
(25)	6 mm socket bolt (not used)	6

TOOLS AND SUPPLIES REQUIRED

Box-end wrench (10 mm) Hex wrench (6 mm)
Electric drill motor Holesaw (20 mm)
Grease Tape
Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
6 mm socket bolt	10	1.0	7
6 mm flange nut	12	1.2	9
8 mm socket bolt	22	2.2	16


USE AND CARE INFORMATION

The weight of the cargo must not exceed the following maximum weight capacity:


Maximum Weight Capacity	
Carrier bracket	14.3 lbs (6.5 kg)

INSTALLATION



1. Refer to the service manual for the motorcycle, remove the motorcycle parts.

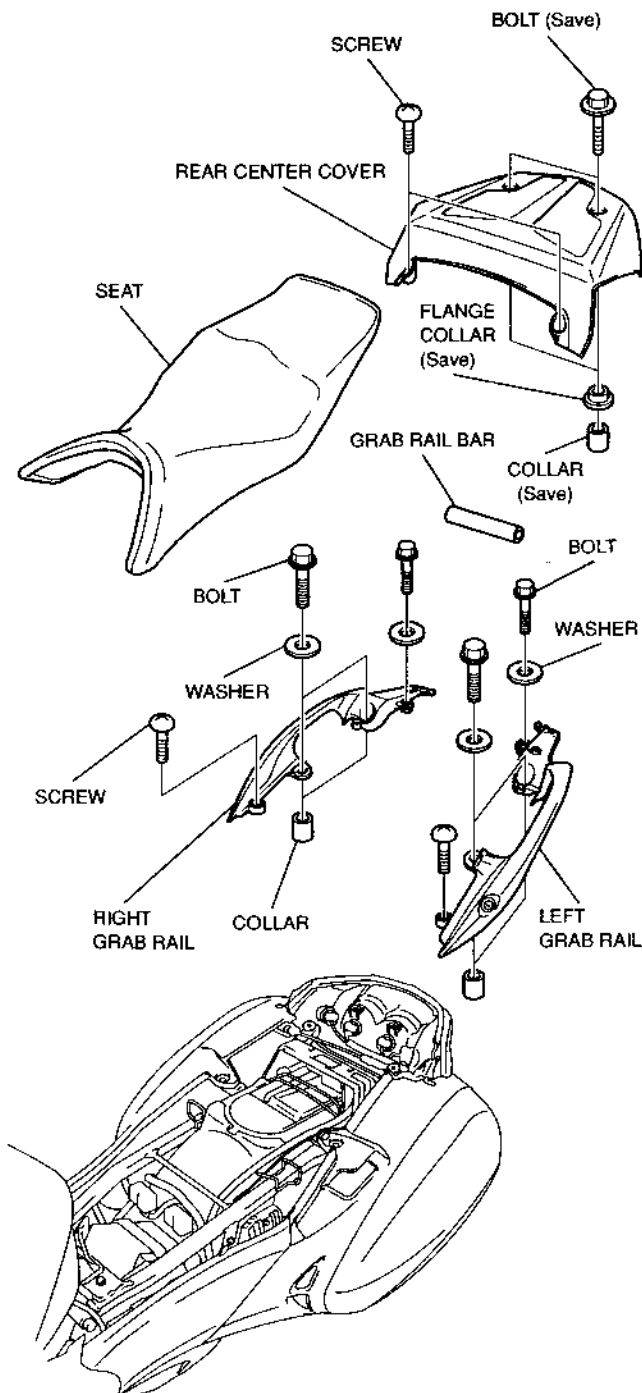


2. Drill the rear center cover at the marked points as shown.
 - Remove any burrs from the edge of the hole.

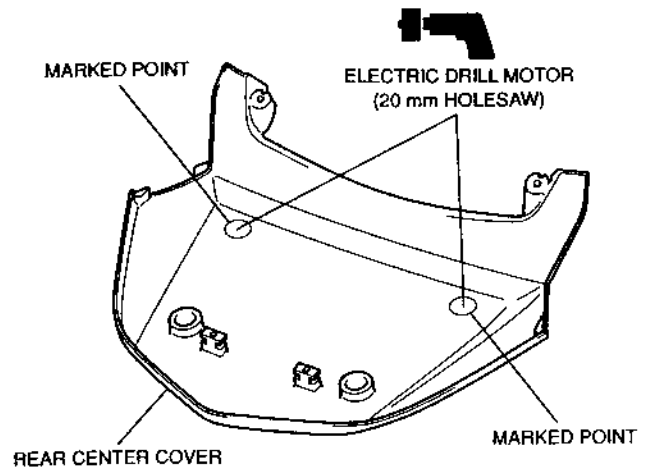



3. Install the square nut on the right grab rail as shown.

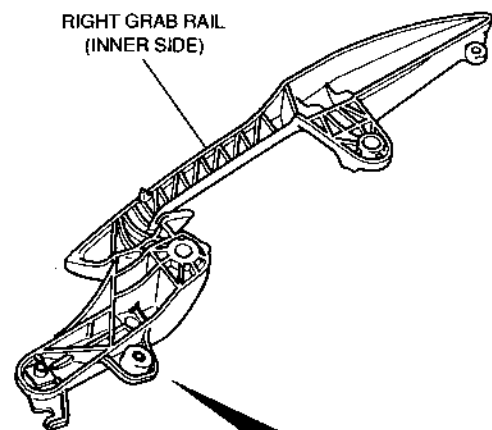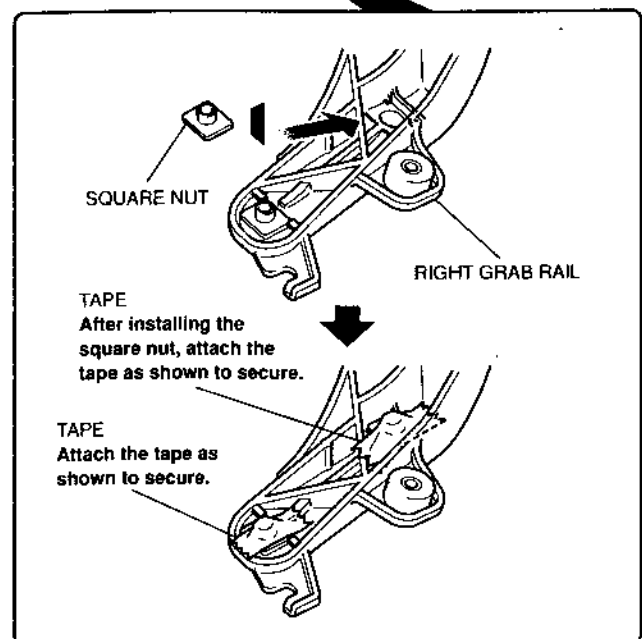


4. Install the square nut on the left grab rail in the same manner.
5. Install the grab rails on the motorcycle in the reverse order of removal.
6. Install the rear center cover as shown.

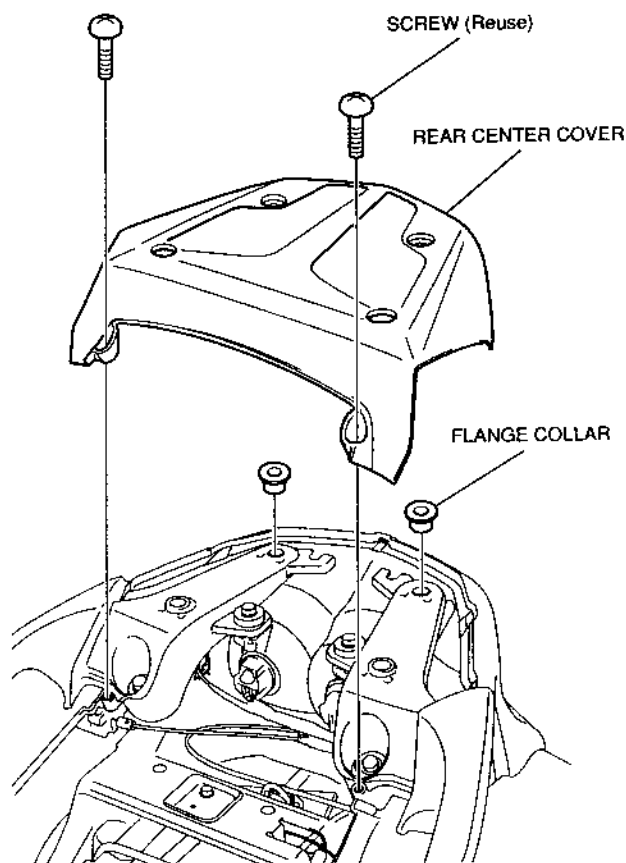


7. Install the rubber on the carrier bracket as shown.

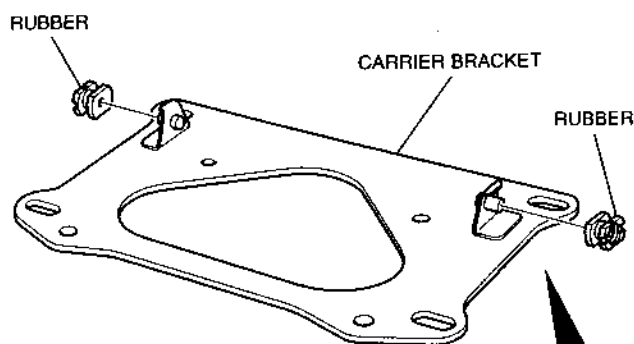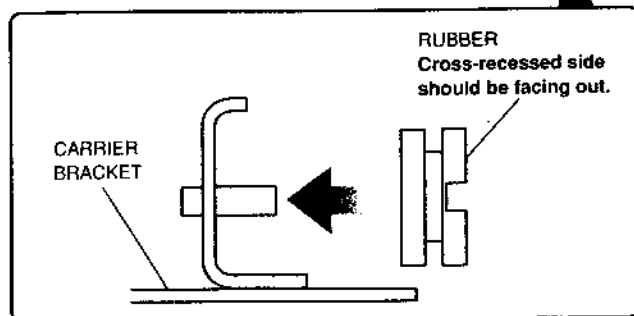


8. Install the carrier bracket as shown.

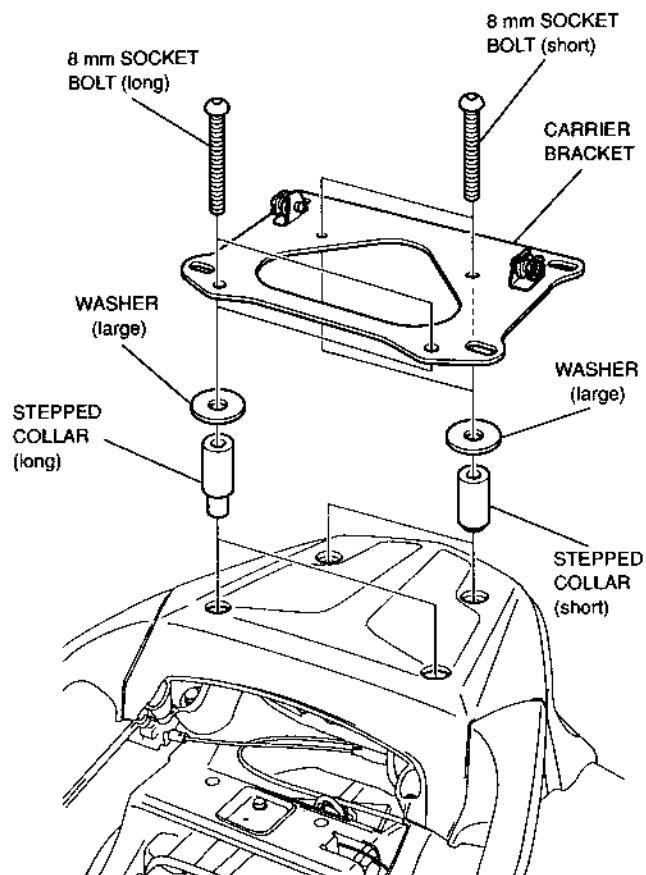

9. Assemble the rear carrier base as shown.

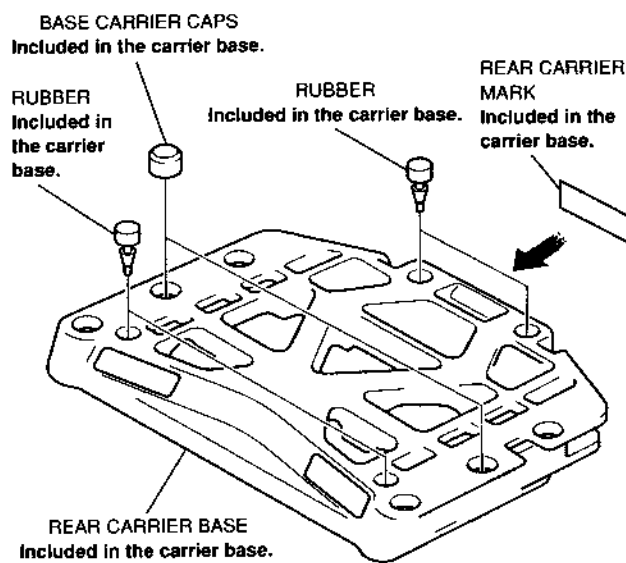


10. Install the rear carrier base as shown.

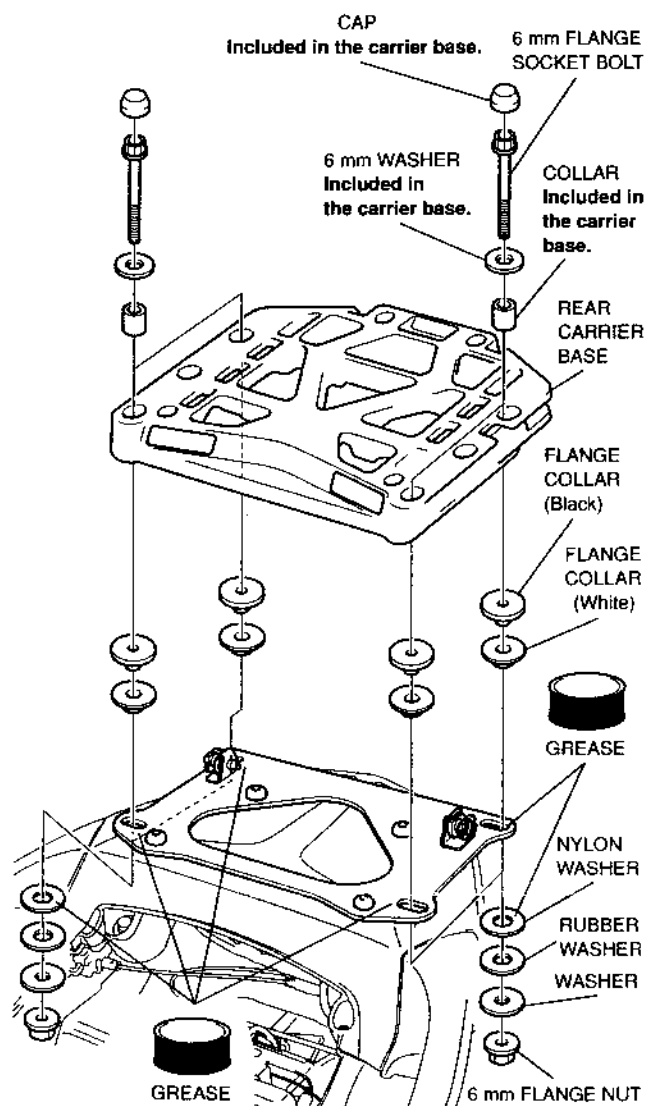

11. Be sure that the carrier base moves right and left smoothly as shown.

- Apply grease to the carrier base occasionally when the movement is sticky.

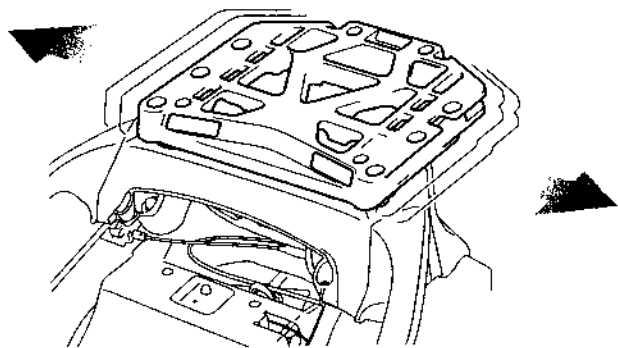

12. Install the motorcycle's parts in the reverse order of removal.